

INDEX

INDEX FOR TOOL NUMBER

A	Q002
B	Q002
C	Q003
D	Q004
E	Q005
F	Q005
G	Q006
H	Q006
J	Q007
K	Q007
L	Q007
M	Q008
N	Q009
O	Q009
P	Q009
Q	Q010
R	Q010
S	Q010
T	Q012
U	Q013
V	Q013
W	Q015
X	Q015
Z	Q015



INDEX FOR TOOL NUMBER

Order Number	PRODUCT NAME	Page	Order Number	PRODUCT NAME	Page
A					
A0000R/L	DG holder pack number	F096,F098	APX3000R000SA000A	APX3000 type end mill	K043
A000-DCLNR/L12	DOUBLE CLAMP DIMPLE BAR	E014	APX3000R000WA000A	APX3000 type end mill	K042
A000-DDUNR/L15	DOUBLE CLAMP DIMPLE BAR	E014	APX3000-000A00RA	APX3000 type face mill	K044
A000-DSKNR/L12	DOUBLE CLAMP DIMPLE BAR	E015	APX4000R000M00A00	APX4000 type end mill	K050
A000-DTFNR/L16	DOUBLE CLAMP DIMPLE BAR	E015	APX4000R000SA000A	APX4000 type end mill	K049
A000-DVUNR/L16	DOUBLE CLAMP DIMPLE BAR	E016	APX4000R000WA000A	APX4000 type end mill	K048
A000-DWLNR/L00	DOUBLE CLAMP DIMPLE BAR	E016	APX4000-000A00RA	APX4000 type face mill	K050
A000MWLNR/L00	M type boring bar	E040	APX4KR000000000000A	APX4000 type end mill	K051
A000PCLNR/L00	P type boring bar	E037	APX4K-000A00A00RA	APX4000 type end mill	K051
A000PDQNR/L00	P type boring bar	E038	AQXR0000A/N00S/L	AQX type end mill	K063,K064
A000PDUNR/L00	P type boring bar	E037	AQXR000M00A00	AQX type end mill	K065
A000PDZNR/L00	P type boring bar	E039	ASS0	Spring (For AJX/BRE/CV type cutter)	C032
A000PSKNR/L00	P type boring bar	E036			K070-K074,K120
A000PTFNR/L00	P type boring bar	E036	ASX400-000000R	ASX400 type face mill	K028
A000PWLNR/L00	P type boring bar	E038	ASX400R000M00	ASX400 type end mill	K029
AEMW0000000R	Insert (For BAE type end mill)	J018	ASX400R000S00	ASX400 type end mill	K028
AHX640W-0000000R/L	AHX type face milling cutter	K022	ASX445-000000R/L	ASX445 type face mill	K010
AJS0000T00	Clamp screw	N003	ASX445R000S00	ASX445 type end mill	K010
AJX00-000000R	AJX type face milling cutter	K070	AXD7000-000000R0	AXD7000 type face mill	K056
AJX00R000000	AJX type face milling cutter	K070	AXD7000R000SA00S0	AXD7000 type end mill	K056
AJX00R000AM00	AJX type face milling cutter	K074	AXD7000R00000A-H63A	AXD7000 type end mill	K057
AJX00R000SA00S/L/EL	AJX type end mill	K072,K073	B		
AMS0	Clamp bridge	N013	B0000R/L	DG holder pack number	F098
AM2MB	ALIMASTER end mill	I211	B10000	Arbor (For D type boring head)	E044,F134
AM2MR	ALIMASTER end mill	I206			G037
AM2SC	ALIMASTER end mill	I207	BAP300-000A00R	BAP300 type face milling cutter	K036
AM2SCRB	ALIMASTER end mill	I212,I213	BAP300R00000ES00	BAP300 type end mill (Long cutting edge)	K039
AM3MF	ALIMASTER end mill	I209	BAP300R00000SN00LU/SU	BAP300 type end mill (Under-cut)	K041
AM3SS	ALIMASTER end mill	I208	BAP300R000LS00	BAP300 type end mill (Long shank)	K037
AM3SSRB	ALIMASTER end mill	I214,I215	BAP300R000M00	BAP300 type end mill	K037
AM4MF	ALIMASTER end mill	I210	BAP300R000S00	BAP300 type end mill	K037
AMMR	ALIMASTER end mill	I216	BAP400-000000R	BAP400 type face milling cutter	K036
AMSR	ALIMASTER end mill	I216	BAP400R00000ES00	BAP400 type end mill (Long cutting edge)	K039
AMSRRB	ALIMASTER end mill	I217	BAP400R000M00	BAP400 type end mill	K037
AOGT0000000PEER-GM	Insert (For APX3000 type cutter)	J018,K045	BAP400R000S00	BAP400 type end mill	K037
AOMT0000000PEER-M/H	Insert (For APX3000*4000 type cutter)	J018	BC0	Clamp set	F132
		K045,K052	BCP000	Shim pin	N012
AOX445-063A04R/L	AOX type face milling cutter	K024	BF407-000000R	BF407 type face milling cutter	K026
AOX445R/L000000	AOX type face milling cutter	K024	BF-CCGT000000002	Insert (Class G tolerance)	B029
APGT00000PDFR-G2	Insert (For BAP300*400 type cutter)	J019	BF-CNGG000000004	Insert (Class G tolerance)	B018
		K036,K039	BF-CNGM0000000002	Insert (Class G tolerance)	B019
APMT00000PDER-H0	Insert (For BAP300*400/SRM2 type cutter)	J019,K036,K039,K041,K109	BF-DCGT0000000002	Insert (Class G tolerance)	B031
		J019,K036,K039,K041,K109	BF-DNGG0000000004	Insert (Class G tolerance)	B018
APMT00000PDER-M0	Insert (For BAP300*400/SRM2 type cutter)	J019,K036,K039,K041,K109	BF-DNGM0000000002	Insert (Class G tolerance)	B021
		J019,K036,K039,K041,K109	BOES101	Set bolt	N003
APX3000R0000000A	APX3000 type end mill	K044	BPT322	Shim	N009
APX3000R000M00A	APX3000 type end mill	K044	BRA0000S00	BRA type drill	L152,L153
			BRK0000S00	BRK type drill	L150

Order Number	PRODUCT NAME	Page	Order Number	PRODUCT NAME	Page
BRM○○○○S○○	BRM type drill	L148	CBT○○	Breaker piece	N015
BRP○○R○○○ELS○○	BRP type end mill	K086	CBT○○○○	Breaker piece	N015
BRP○○R○○○LS○○	BRP type end mill	K086	CCET○○○○○○R/L-SN	Insert (Class E tolerance)	A096
BRP○○R○○○S○○	BRP type end mill	K086	CCET○○○○○○R/L-SR	Insert (Class E tolerance)	A096
BRPON-○○○○○○R	BRP type face milling cutter	K085	CCET○○○○○○R/LW-SN	Insert (Class E tolerance)	A097
BRPONR○○○○M○○	BRP type end mill	K085	CCGH○○○○○○R/L-F	Insert (Class G tolerance)	A094
BRPOP-○○○○○○R	BRP type face milling cutter	K085	CCGT○○○○○○-AZ	Insert (Class G tolerance)	A094
BRS○○○	Clamp screw	N003	CCGT○○○○○○-FJ	Insert (Class G tolerance)	A094
BRS○○○○S○○	BRS type drill	L146	CCGT○○○○○○L-F	Insert (Class G tolerance)	A094
BSPR○○○○S○○	BSP type end mill	K078	CCGT○○○○○○R/L-SN	Insert (Class G tolerance)	A097
BT50-○○-○○-○○	Long arbor (For AJX/PMF/PMR type cutter)	K071,K117,K119	CCGT○○○○○○R/L-SS	Insert (Class G tolerance)	A095
BTahr/L○○○○-50	Small tools holder (External back turning)	D012	CCGT○○○○○○-SMG	Insert (Class G tolerance)	A097
BTAT605000RX	Insert for external back turning	D012	CCGW○○○○○○	Insert (Class G tolerance)	A097
BTAT○○○○○○R/L-B	Insert for external back turning	D012	CCK○○	Clamp bridge	N013
BTBT○○○○○○R/L-B	Insert for external back turning	D013	CCMH○○○○○○-MV	Insert (Class M tolerance)	A095
BTBT606000R/L	Insert for external back turning	D013	CCMH○○○○○○-SV	Insert (Class M tolerance)	A095
BTVHR○○○○-75○	Small tools holder (External back turning)	D014	CCMT○○○○○○	Insert (Class M tolerance)	A095
BTVT○○○○○○R-B	Insert for external back turning	D014	CCMT○○○○○○-FV	Insert (Class M tolerance)	A094
BXD4000-○○○○○○A/B	BXD4000 type face milling cutter	K060	CCMT○○○○○○-MW	Insert (Class M tolerance)	A096
BXD4000R○○○○○○	BXD4000 type face milling cutter	K060	CCMT○○○○○○-SW	Insert (Class M tolerance)	A095
BXD4000R○○○SA○○SA/LA/SB/LB	BXD4000 type end mill	K061	CCMW○○○○○○	Insert (Class M tolerance)	A097,B046
C			CCMX○○○○○○EN-○	Insert (For DCCC type end mill)	J019,J020
○○○○R/L	DG holder pack number	F096,F098	CCP○○	Shim pin	N012
○○○SCLCR○○	S type boring bar (Carbide shank)	E017,E031	CCTC○	Clamp bridge	N013
○○○SDQCR○○	S type boring bar (Carbide shank)	E032	GESPR○○○S○○	CESP type end mill	K110
○○○SDUCR○○	S type boring bar (Carbide shank)	E030	CFSPR○○○S○○	CFSP type end mill	K110
○○○STFCR○○	S type boring bar (Carbide shank)	E029	CG○○RS-○○○	MICRO-MINI TWIN	F126
○○○STUCR○○	MICRO-DEX boring bar (Carbide shank)	E018	CGSPR○○○S○○	CGSP type end mill	K110
○○○SVQCR○○	S type boring bar (Carbide shank)	E033	CK○○○	Clamp bridge	N013
○○○SWUBR○○	MICRO-DEX boring bar (Carbide shank)	E017	CKW6	Clamp bridge	N014
○○FR-BLS	MICRO-MINI boring bar (Solid carbide)	E023	CNGG○○○○○○-FJ	Insert (Class G tolerance)	A062
○○HR-BLS	MICRO-MINI boring bar (Solid carbide)	E023	CNGG○○○○○○-MJ	Insert (Class G tolerance)	A063
CA○○○	Clamp bridge	N013	CNGG○○○○○○-PK	Insert (Class G tolerance)	A062
CAS○○T	Set screw	N003	CNGN○○○○○○	Insert (Class G tolerance)	B026
CB○○RS	MICRO-MINI TWIN	E020	CNMA○○○○○○	Insert (Class M tolerance)	A067,B042
CB○○RS-○○	MICRO-MINI TWIN	E020	CNMG○○○○○○	Insert (Class M tolerance)	A064
CB○○RS-B	MICRO-MINI TWIN	E020	CNMG○○○○○○-FH	Insert (Class M tolerance)	A062
CB○○RS-○○B	MICRO-MINI TWIN	E020	CNMG○○○○○○-FS	Insert (Class M tolerance)	A062
CBJPR○○○S○○	CBJP type end mill	K112	CNMG○○○○○○-FY	Insert (Class M tolerance)	A062
CBMPR○○○○S○○	CBMP type end mill	K112	CNMG○○○○○○-GH	Insert (Class M tolerance)	A065
CBN2XLB	CBN end mill	I202	CNMG○○○○○○-GJ	Insert (Class M tolerance)	A065
CBN2XLRB	CBN end mill	I203	CNMG○○○○○○-HAS	Insert (Class M tolerance)	A066
CBS○	Breaker piece	N015	CNMG○○○○○○-HDS	Insert (Class M tolerance)	A066
CBS○○	Breaker piece	N015	CNMG○○○○○○-MA	Insert (Class M tolerance)	A063
CBT○	Breaker piece	N015	CNMG○○○○○○-MH	Insert (Class M tolerance)	A064
			CNMG○○○○○○-MJ	Insert (Class M tolerance)	A063
			CNMG○○○○○○-MP	Insert (Class M tolerance)	A063
			CNMG○○○○○○-MS	Insert (Class M tolerance)	A065

INDEX FOR TOOL NUMBER

Order Number	PRODUCT NAME	Page	Order Number	PRODUCT NAME	Page
CNMG000000-MV	Insert (Class M tolerance)	A063	CSVTG000000R/L	Insert for grooving	D029
CNMG000000-MW	Insert (Class M tolerance)	A064	CSVTT60050RR/L	Insert for threading	D029
CNMG000000-SA	Insert (Class M tolerance)	A063	CT00	Shim	N009
CNMG000000-SH	Insert (Class M tolerance)	A062	CT00RS-M00	MICRO-MINI TWIN	G030
CNMG000000-SW	Insert (Class M tolerance)	A063	CT32T1	Shim	N010
CNMG000000-SY	Insert (Class M tolerance)	A063	CTAHR/L0000-120	Small tools holder (External cutting off)	D018
CNMM000000-HBS	Insert (Class M tolerance)	A066	CTAHR1010-120S	Small tools holder (External cutting off)	D018
CNMM000000-HCS	Insert (Class M tolerance)	A066	CTAT00000000-B	Insert for cutting off	D019
CNMM000000-HL	Insert (Class M tolerance)	A065	CTAT00000000-BX	Insert for cutting off	D019
CNMM000000-HM	Insert (Class M tolerance)	A065	CTAT00000000LL/RR	Insert for cutting off	D019
CNMM000000-HV	Insert (Class M tolerance)	A066	CTBHR/L0000-160	Small tools holder (External back turning, External cutting off)	D013,D020
CNMM000000-HX	Insert (Class M tolerance)	A066	CTBT00000000-B	Insert for cutting off	D020
CNMM000000-HXD	Insert (Class M tolerance)	A067	CTCHR/L0000-200	Small tools holder (External cutting off)	D021
CNMM000000-HZ	Insert (Class M tolerance)	A065	CTCT00000000-B	Insert for cutting off	D021
CPEX000000R/L	Insert (For VIPER type end mill)	J020	CTDHR/L1616-000	Small tools holder (External cutting off)	D022
CPGT000000	Insert (Class G tolerance)	A098,B047	CTDT00000000-B	Insert for cutting off	D022
CPGT000000R/L-F	Insert (Class G tolerance)	A098	CTDT00000000-B0	Insert for cutting off	D022
CPMH000000-FV	Insert (Class M tolerance)	A098	CTE00TN/P00	Shim (For MMTE holder)	G012
CPMH000000-MV	Insert (Class M tolerance)	A098	CTEHR/L1616-000	Small tools holder (External cutting off)	D023
CPMH000000R/L-F	Insert (Class M tolerance)	A098	CTET00000000-B	Insert for cutting off	D023
CPMH000000-SV	Insert (Class M tolerance)	A098	CTET00000000-B0	Insert for cutting off	D023
CPMT0000ZPEN-M0	Insert (For PMR type end mill)	J020,K118	CTI00TN/P00	Shim (For MMTI holder)	G013
CPMX000000	Insert (Class M tolerance)	A098	CWAHX640WN	Wedge	K022
CPT00	Side lock plate	C017,C018,C023	CWAOX445N	Wedge	K024
CR0	Stop ring	G012,G013,G022,G024,K080	CWNSE000TR	Wedge	K032
CR00RS-00	MICRO-MINI TWIN	E021	CWSE000TR	Wedge-T	K014,K016,K018,K020,K032,K033
CR00RS-00B	MICRO-MINI TWIN	E021	CWSE000SN	Wedge-S	K016,K018,K020
CRN2MB	CRN end mill	I179	CWSF407TR0	Wedge	K026
CRN2MRB	CRN end mill	I183	CWSG20SN	Wedge-S	K027
CRN2MS	CRN end mill	I175	CWSG20TR	Wedge-T	K027
CRN2XL	CRN end mill	I176,I177	CWSP415TR	Wedge-T	K025
CRN2XLB	CRN end mill	I180-I182	CWTSE300TR	Wedge-T	K032,K033
CRN2XLRB	CRN end mill	I184,I185			
CRN4JC	CRN end mill	I178	D		
CS0	Clamp screw	N003	D0000R/L	DG holder pack number	F098
CS00	Shim	N009	D0000T	Clamp screw	N003
CS000T	Clamp screw	N003	DC2LB	Diamond(DC) coated end mill	I199
CS000000T	Clamp screw	N003	DC2MB	Diamond(DC) coated end mill	I198
CS000000TS	Clamp screw	N003	DC2MBNF	Diamond(DC) coated end mill	I197
CSF000000T	Clamp screw	N003	DC2MS3	Diamond(DC) coated end mill	I196
CSVHR/L0000	Small tools holder (For cam tool posts)	D027	DC2XLB	Diamond(DC) coated end mill	I200
CSVTB000R/L	Insert for external back turning	D028	DCCCR0000S00	DCCC type end mill	K093
CSVTB000R-B	Insert for external back turning	D028	DCET000000R/L-SN	Insert (Class E tolerance)	A101
CSVTBXL	Insert for external back turning, Copying	D028	DCET000000R/L-SR	Insert (Class E tolerance)	A100
CSVTC0000R/L	Insert for external cutting off	D028	DCET000000R/LW-SN	Insert (Class E tolerance)	A101
CSVTC0000R-B	Insert for external cutting off	D028	DCGT000000-AZ	Insert (Class G tolerance)	A099
CSVTF000R/L	Insert for external front turning	D027	DCGT000000R/L-F	Insert (Class G tolerance)	A099
CSVTF000R/L-B	Insert for external front turning	D027	DCGT000000R/L-SN	Insert (Class G tolerance)	A101
CSVTFXL	Insert for external front turning, Copying	D027			

Order Number	PRODUCT NAME	Page	Order Number	PRODUCT NAME	Page
DCGT○○○○○○R/L-SS	Insert (Class G tolerance)	A099	DNMG○○○○○○-MH	Insert (Class M tolerance)	A070
DCGT○○○○○○-SMG	Insert (Class G tolerance)	A101	DNMG○○○○○○-MJ	Insert (Class M tolerance)	A069
DCGW○○○○○○	Insert (Class G tolerance)	A102	DNMG○○○○○○-MP	Insert (Class M tolerance)	A069
DCK○○R/L	Clamp bridge	N014	DNMG○○○○○○-MS	Insert (Class M tolerance)	A071
DCLNR/L○○○○○○	DOUBLE CLAMP holder	C008	DNMG○○○○○○-MV	Insert (Class M tolerance)	A070
DCLNR/L○○○○○○-T	DOUBLE CLAMP holder	C008	DNMG○○○○○○-SA	Insert (Class M tolerance)	A069
DCMT○○○○○○	Insert (Class M tolerance)	A100	DNMG○○○○○○-SH	Insert (Class M tolerance)	A068
DCMT○○○○○○-FV	Insert (Class M tolerance)	A099	DNMG○○○○○○-SY	Insert (Class M tolerance)	A069
DCMT○○○○○○-MV	Insert (Class M tolerance)	A100	DNMM○○○○○○-HL	Insert (Class M tolerance)	A071
DCMT○○○○○○-SV	Insert (Class M tolerance)	A099	DNMM○○○○○○-HZ	Insert (Class M tolerance)	A071
DCMW○○○○○○	Insert (Class M tolerance)	A102,B046	DNMX○○○○○○-MW	Insert (Class M tolerance)	A071
DCS○	Spring C008,C010,C017-C022,E014-E016		DNMX○○○○○○-SW	Insert (Class M tolerance)	A069
DGSVN32	Shim	N009	DPCL○○○R	D type boring head	E043
DCXB	Diamond(DC) coated end mill	I201	DPDH○○○R	D type boring head	E043
DDJNR/L○○○○○○	DOUBLE CLAMP holder	C010	DPDU○○○R	D type boring head	E042
DDJNR/L○○○○○○-T	DOUBLE CLAMP holder	C010	DPT2○○○R	D type boring head	G036
DEGX○○○○○○R/L	Insert (For AL holder)	A103	DPT4○○○R	D type boring head	F134
DEGX○○○○○○R/L-F	Insert (For AL holder)	A103,B047	DPTF○○○R	D type boring head	E042
DF2MB	Diamond(DF) coated end mill	I190	DPVP○○○R	D type boring head	E044
DF2XLB	Diamond(DF) coated end mill	I191,I192	DTGNR/L○○○○○○16	DOUBLE CLAMP holder	C017
DF3XB	Diamond(DF) coated end mill	I193	DTGNR/L○○○○○○16-T	DOUBLE CLAMP holder	C017
DF4JC	Diamond(DF) coated end mill	I188	DVJNR/L○○○○○○16	DOUBLE CLAMP holder	C019
DF4XL	Diamond(DF) coated end mill	I189	DVPNR/L○○○○○○16	DOUBLE CLAMP holder	C021
DFPSRB	Diamond(DF) coated end mill	I194	DVVNN○○○○○○16	DOUBLE CLAMP holder	C020
DG○○BE	Blank Insert for DG holder	F117,H021	DWLNR/L○○○○○○06	DOUBLE CLAMP holder	C022
DGHR/L○○○○○○	DG holder	F096-F114	DWLNR/L○○○○○○06-T	DOUBLE CLAMP holder	C022
DGJ○○○○	Insert (For DG holder)	B039,F116,F117 F133,H020,H021	E		
DGK○○R/L	Clamp bridge	N014	E○○	Stop ring	C019-C021,E044,F134,G036
DGM○○○○○	Insert (For DG holder)	F116,F117,F133 H020,H021	E○○○○R/L	DG holder pack number	F100,F101
DGS51	Clamp screw	N003	EA○○R/L	Locator (For DG holder)	F096,F098,F100
DKS○	Clamp screw	N003	EA○○RS/LS	Locator (For DG holder)	F098
DLC2MA	DLC coated end mill	I186	EB○○R/L	Locator (For DG holder)	F096,F098,F100 F101,H014
DLC2MB	DLC coated end mill	I187	EB○○RS/LS	Locator (For DG holder)	F098,F101,F102,H014
DNGA○○○○○○	Insert (Class G tolerance)	A072,B042	EB○○RX/LX	Locator (For DG holder)	F098,F101,F102 H014,H015
DNGG○○○○○○-FJ	Insert (Class G tolerance)	A068	EGHR○○○○○○	EG holder	F120
DNGG○○○○○○-PK	Insert (Class G tolerance)	A068	EGS○○○○○	Clamp screw	N004
DNGG○○○○○○R/L	Insert (Class G tolerance)	A071	EGT○	Insert (For EG holder)	F120
DNGM○○○○○○-MJ	Insert (Class G tolerance)	A069	ESS42	Shim	N009
DNGN○○○○○○	Insert (Class G tolerance)	B026	EST○○	Shim	N009
DNMA○○○○○○	Insert (Class M tolerance)	A072	F		
DNMG○○○○○○	Insert (Class M tolerance)	A070	F○○○○R/L	DG holder pack number	F101
DNMG○○○○○○-FH	Insert (Class M tolerance)	A068	FA○○R/LOS	Locator (For DG holder)	F108,F114
DNMG○○○○○○-FS	Insert (Class M tolerance)	A068	FA○○R/L○	Locator (For DG holder)	F104,F112
DNMG○○○○○○-FY	Insert (Class M tolerance)	A068	FB○○R/L○	Locator (For DG holder)	F104,F108,F112 F114,H016,H017
DNMG○○○○○○-GH	Insert (Class M tolerance)	A071			
DNMG○○○○○○-GJ	Insert (Class M tolerance)	A071			
DNMG○○○○○○-MA	Insert (Class M tolerance)	A070			



INDEX FOR TOOL NUMBER

Order Number	PRODUCT NAME	Page	Order Number	PRODUCT NAME	Page
FBOR/LOD	Locator (For DG holder)	F104,F108,F112 F114,H016,H017	GPMT	Insert (For TAF type drill)	L141
FBOR/LOS	Locator (For DG holder)	F108,F114,H017	GTHR/L	Small tools holder (External grooving)	D016
FBP415	FBP415 type face milling cutter	K025	GTOT	Insert for external grooving	D016
FC400890T	Clamp screw	N004	GTOT	Insert for external grooving	D017
FCOR/LO	Locator (For DG holder)	F106,F112	GTOT	Insert for external grooving	D017
FCOR/LOS	Locator (For DG holder)	F110,F114	GTOTR/L	Insert (Blank)	D017
FCDG4	FCDG4-J type boring bar	F132	GY05016S	Clamp screw	N004
FCDG4	FCDG4-M type boring bar	F132	GY06013M	Clamp screw	N004
FCTU	FCTU type boring bar	E027	GY1G	Insert (For GY holder)	B040,F011
FDOR/LO	Locator (For DG holder)	F106,F110,F112 F114,H018,H019	GY2M	Insert (For GY holder)	F011
FDOR/LOD	Locator (For DG holder)	F106,F110,F112 F114,H018,H019	GY2M	Insert (For GY holder)	F010
FDOR/LOS	Locator (For DG holder)	F110,F114,H019	GY2M	Insert (For GY holder)	F011
FSCLC1008R/L-06A	DIMPLE BAR	E007	GY2M	Insert (For GY holder)	F011
FSCLC1008R/L-06E	DIMPLE BAR (Carbide shank)	E007	GY2M	Insert (For GY holder)	F010
FSCLC1008R/L-06E	DIMPLE BAR (Carbide shank)	E007	GY2M	Insert (For GY holder)	F011
FSCLP	DIMPLE BAR	E007	GY2M	Insert (For GY holder)	F010
FSCLP	DIMPLE BAR (Carbide shank)	E007	GY2M	Insert (For GY holder)	F010
FSCLP	DIMPLE BAR (Carbide shank)	E007	GY2M	Insert (For GY holder)	F010
FSCLP	DIMPLE BAR (Carbide shank)	E007	GY2M	Insert (For GY holder)	F010
FSDQC	DIMPLE BAR	E010	GYAR	GY boring bar	F076
FSDQC	DIMPLE BAR (Carbide shank)	E010	GYAR	GY boring bar	F076
FSDUC	DIMPLE BAR	E009	GYAR	GY boring bar	F078
FSDUC	DIMPLE BAR (Carbide shank)	E009	GYAR	GY boring bar	F078
FSL5	FSL5 type boring bar	F130,G034	GYAR	GY boring bar	F080
FSTU	FSTU type boring bar	E026	GYDR/L	GY boring bar	F076—F080
FSTUP	DIMPLE BAR	E008	GYHR/L	GY holder	F012,F014,F016,F018,F020,F022 F034—F060
FSTUP	DIMPLE BAR (Carbide shank)	E008	GYHR/L	GY holder	F024,F026,F062—F068
FSTUP	DIMPLE BAR (Carbide shank)	E008	GYMOR/L	Modular blade	F012,F024,F076
FSVJB	DIMPLE BAR	E013	GYMOR/L	Modular blade	F014,F024,F076
FSVJC	DIMPLE BAR	E013	GYMOR/L	Modular blade	F016,F024,F078
FSVPB	DIMPLE BAR	E012	GYMOR/L	Modular blade	F018,F026,F078
FSVPC1610R/L-08A	DIMPLE BAR	E012	GYMOR/L	Modular blade	F020,F026,F080
FSVUB	DIMPLE BAR	E012	GYMOR/L	Modular blade	F022,F026,F080
FSVUC1612R/L-08A	DIMPLE BAR	E012	GYMOR/L	Modular blade	F034—F040,F062
FSWL	FSWL type boring bar	E028	GYMOR/L	Modular blade	F042—F048,F064
FSWUB	DIMPLE BAR	E011	GYMOR/L	Modular blade	F050—F056,F066
FSWUB	DIMPLE BAR (Carbide shank)	E011	GYMOR/L	Modular blade	F058—F060,F068
FSWUB	DIMPLE BAR (Carbide shank)	E011	H		
FSWUP	DIMPLE BAR	E011	H	DG holder pack number	F104,F108
FSWUP	DIMPLE BAR (Carbide shank)	E011	H100TH-B	HSK boring bar holder	H030
FSWUP	DIMPLE BAR (Carbide shank)	E011	H100TH-EV3232R/L-180	HSK external turning tool holder	H027
FSWUP	DIMPLE BAR (Carbide shank)	E011	H100TH-EN3232R/L-130	HSK external turning tool holder	H028
G			H63TH-A	HSK boring bar holder	H008
G	DG holder pack number	F102	H63TH-B	HSK boring bar holder	H029
GBE	GBE type end mill	I204	H63TH-C	HSK DG type holder	H014
GCMT040204-U	Insert (For TAF type drill)	L141	H63TH-D	HSK DG type holder	H014
GDE	GDE type end mill	I204	H63TH-D	HSK DG type holder	H014
			H63TH-DCLNR/L-DX12	HSK DCLN type holder	H006
			H63TH-DCLNL-L12-3	HSK DCLN type holder	H008
			H63TH-DCMNN-H/L12	HSK DCMN type holder	H007
			H63TH-DDJNL-L15-3	HSK DDJN type holder	H011
			H63TH-DDJNR/L-DX15	HSK DDJN type holder	H009

Order Number	PRODUCT NAME	Page	Order Number	PRODUCT NAME	Page
H63TH-DDNNN-H/L15HSK DDNN type holder.....	H010	J		
H63TH-DGHN-00HSK DG type holder.....	H015	J		
H63TH-DGHR/L0HSK DG type holder.....	H014—H019	J0000R/LDG holder pack number.....	F106,F110
H63TH-EN2525R/L-115HSK external turning tool holder.....	H028	JDMT000000ZDSR-00Insert (For AJX type cutter).....	J020,K071,K120
H63TH-EV2020R/L-105-3HSK external turning tool holder.....	H029	JDMW000000ZDSR-FTInsert (For AJX type cutter).....	J020,K071,K120
H63TH-EV2525R/L-112HSK external turning tool holder.....	H027	JFS-0JUST FIT SLEEVE set number.....	L143
H63TH-G0000N0HSK DG type holder.....	H015	JFS0000-00JUST FIT SLEEVE (JFS).....	L143
H63TH-M0000R/LHSK DG type holder.....	H016,H017	JOMT000000ZZSR-JMInsert (For AJX type cutter).....	J020,K071,K120
H63TH-N0000R/LHSK DG type holder.....	H018,H019	JOMW000000ZZSR-FTInsert (For AJX type cutter).....	J020,K071,K120
H63TH-P0000R/LHSK DG type holder.....	H017	JPMT060204-0Insert (For TAB/CBJP type end mill).....	J021,K112
H63TH-Q0000R/LHSK DG type holder.....	H019	JPMX000000-00Insert (For SPX type cutter).....	J021,K090
H63TH-MGHR/L-DX0000HSK MG type holder.....	H022	JSS0Shim screw.....	N004
H63TH-MMTER-DX16HSK MMT type holder.....	H024	K		
H63TH-MMTENR-H/L16HSK MMT type holder.....	H024	K0000R/LDG holder pack number.....	F108
H63TH-MTHR/L-DX43HSK MT type holder.....	H025	KGBN00Block (For UG holder).....	F118
H63TH-PCLNR/L-DX12HSK PCLN type holder.....	H006	KGBN00-00Tool block (For UG holder).....	F118
H63TH-PCMNN-H/L12HSK PCMN type holder.....	H007	KGC1Clamp bridge.....	N014
H63TH-PDJNR/L-DX15HSK PDJN type holder.....	H009	KGS00Shank (For UG tool block).....	F118
H63TH-PDNNN-H/L15HSK PDNN type holder.....	H010	KGT0NInsert (For UG holder).....	F119
H63TH-PRDCN-H/L12HSK PRDC type holder.....	H012	KGT0R/LInsert (For UG holder).....	F119
H63TH-PRGCR/L-DX12HSK PRGC type holder.....	H012	KNUX000000R/L-M0Insert (Class U tolerance).....	A091
H63TH-SVPBR/L-DX16HSK SVPB type holder.....	H013	KS0Axial screw.....	N004
H63TH-SVVBH-H/L16HSK SVVB type holder.....	H013	KS00Set bolt.....	N004
HBH00000Clamp screw.....	N002	KS0SPre-set screw.....	N004
HBHA00000Clamp screw.....	N002	KSMGR000S00KSMG type end mill.....	K114
HDS00000Clamp screw.....	N008	L		
HFF06015Clamp screw.....	N004	L0000R/LDG holder pack number.....	F110
HFF08043HClamp screw.....	N004	LK1Clamp bridge.....	N014
HGM-PT0/0Plug..... E036—E040,H007—H015,H024,H027		LLCL000Clamp lever.....	N012
HKY00DDriver.....	N002	LLCL000SClamp lever.....	N012
HKY00FFlag wrench.....	N002	LLCS000Clamp screw.....	N005
HKY00LL-wrench.....	N002	LLCS000SClamp screw.....	N005
HKY00RL-wrench.....	N002	LLP00Shim pin.....	N012
HKY00TT-wrench.....	N002	LLR0Radial screw.....	N005
HKY00WFlag wrench.....	N002	LLSCN00Shim.....	N009
HLS0Lever spring.....	K114	LLSCP00Shim.....	N009
HP00Clamp pin..... E036—E039		LLSDN00Shim.....	N009
HS00Clamp screw.....	N004	LLSDP42Shim.....	N009
HSC00000Clamp screw.....	N002	LLSRN000Shim.....	N009
HSC00000HSet bolt.....	N004	LLSSN00Shim.....	N009
HSK-CP00SCoolant pipe (HSK holder)..... H006—H019		LLSSP42Shim.....	N009
		H022—H030	LLSTE32Shim.....	N010
HSP05008CLock screw.....	N004	LLSTN00Shim.....	N010
HSS00000Clamp screw.....	N002	LLSTP00Shim.....	N010
HY0Bush screw.....	N004	LLSWN000Shim.....	N010
HY-A0Bush screw.....	N004	LLSWP000Shim.....	N010
HY-V0Bush screw.....	N004	LS0Clamp screw.....	N005



INDEX FOR TOOL NUMBER

Order Number	PRODUCT NAME	Page	Order Number	PRODUCT NAME	Page
LS00	Clamp screw	N005	MPS0000S/L-DIN	MPS type drill DIN6537 (Whistle notch shank type)	L040—L056
LS00T	Clamp screw	N005	MPS0000S/L-DIN-C	MPS type drill DIN6537 (Cylindrical shank type)	L040—L056
LS00TS	Clamp screw	N005	MPS0000-L00C	MPS type drill	L040—L054
LS24H	Clamp screw	N005	MS2ES	MSTAR end mill	I037
LSE445R-000000R/L	LSE445 type face milling cutter	K014	MS2JS	MSTAR end mill	I019
M			MS2LS	MSTAR end mill	I020
M0000R/L	DG holder pack number	F104,F108	MS2MB	MSTAR end mill	I041
MBA00000H	Clamp screw	N005	MS2MB-E	MSTAR end mill	I079
MAE0000MB	MAE type drill (External coolant)	L102—L106	MS2MC-E	MSTAR end mill	I073
MAS0000LB/MB	MAS type drill (Internal coolant)	L102—L106	MS2MRB	MSTAR end mill	I052,I053
MES0	Spring	C016—C018,C023,E040 F096,F121,H015	MS2MS	MSTAR end mill	I017,I018
MCLNR0000019	DOUBLE CLAMP holder	C009	MS2MT	MSTAR end mill	I059—I062
MG1R/L000000000	MG1 type holder	F121	MS2MTB	MSTAR end mill	I072
MGD00	Driver	L063	MS2SB	MSTAR end mill	I040
MGHR/L000000000	MG holder	F122	MS2SB-E	MSTAR end mill	I078
MGS6	Clamp screw	N006	MS2SS	MSTAR end mill	I016
MGS0000L000B	MGS type drill	L062	MS2XB	MSTAR end mill	I048—I051
MGTR/L00000	Insert (For MG holder)	B041,F123,F135,H023 K115	MS2XL	MSTAR end mill	I021—I023
MHK5NR/L	Clamp bridge	N014	MS2XL6	MSTAR end mill	I024,I025
MHS0000L000B	MHS type drill	L108—L114	MS2XLB	MSTAR end mill	I042—I047
MHS000R/L	Shim	N010	MS2XLRB	MSTAR end mill	I054
MHT1	Clamp screw	N006	MS3ES	MSTAR end mill	I038
MK1K	Anti seize lubricant	N016	MS3MC-E	MSTAR end mill	I074
MK1KS	Anti seize lubricant	N016	MS4EC	MSTAR end mill	I039
MLCP42	Shim	N010	MS4JC	MSTAR end mill	I033
MLDP42	Shim	N010	MS4JC-E	MSTAR end mill	I076
MLG0000L	Insert (For FSL5 type boring bar)	F131,G035	MS4LT	MSTAR end mill	I063—I068
MLP0000L	Insert (For FSL5 type boring bar)	F131,G035	MS4LTB	MSTAR end mill	I069—I071
MLSP42	Shim	N010	MS4MC	MSTAR end mill	I032
MLT0000L	Insert (For FSL5 type boring bar)	F131,G035	MS4MC-E	MSTAR end mill	I075
MLTP32	Shim	N010	MS4MRB	MSTAR end mill	I055,I056
MMT00ER000000000	Insert (For MMTE holder)	G014—G020	MS4MRB-E	MSTAR end mill	I080
MMT00IR000000000	Insert (For MMTI boring bar)	G015—G021	MS4SC	MSTAR end mill	I031
MMTER000000000-C	MMTE holder	G012	MS4XL	MSTAR end mill	I034—I036
MMTIR0000A00000000	MMTI boring bar	G013	MS6MH-E/MS8MH-E	MSTAR end mill	I077
MNS0000S/L-DIN	MNS type drill DIN6537 (Whistle notch shank type)	L078—L099	MSBNR0000019	DOUBLE CLAMP holder	C012
MNS0000S/L-DIN-C	MNS type drill DIN6537 (Cylindrical shank type)	L078—L099	MSCN63	Shim	N010
MNS0000-L00C	MNS type drill	L078—L097	MSE0000SB	MSE type drill	L008—L010
MNS0000LB/X00DB	MNS type drill	L078—L097	MSJHD	MSTAR end mill	I029
MPMT0000000	Insert (For CBMP/ECMP/TAB type end mill)	J021,K112	MSL0000-L00C	MSL type drill	L057—L059
MPMW0000000	Insert (For TSMP type end mill)	J021,K111	MSMHD	MSTAR end mill	I027,I028
MPMX120412-00	Insert (For SPX type end mill)	J021,K090	MSMHDRB	MSTAR end mill	I057,I058
MP6	Shim pin	N012	MSMHZD	MSTAR end mill	I030
			MSP0300SB	MSP type starting drill	L010
			MSSHD	MSTAR end mill	I026
			MSSN63	Shim	N010
			MSSNR0000019	DOUBLE CLAMP holder	C014

Order Number	PRODUCT NAME	Page	Order Number	PRODUCT NAME	Page
MT1R/L	MT1 type holder	G026	NP-TPMH	Insert (Class M tolerance)	B049
MTENN	WP holder	C017	NP-TPMX	Insert (Class M tolerance)	B049
MTHR/L	MT holder	G026	NP-VBGT	Insert (Class G tolerance)	B050
MTJNR/L	WP holder	C016	NP-VBGW	Insert (Class G tolerance)	B035
MTK	Clamp bridge	N014	NP-VCGT	Insert (Class G tolerance)	B050
MTQNR/L	WP holder	C018	NP-VCGW	Insert (Class G tolerance)	B036
MTTR/L	Insert (For MT holder/D type boring head)	G027,G037,H026	NP-VNGA	Insert (Class G tolerance)	B024
MWE	MWE type drill	L020-L035	NP-VNGA	Insert (Class G tolerance)	B024
MWLNR/L	WP holder	C023	NP-VNMM	Insert (Class M tolerance)	B044
MWS	MWS type drill	L012-L035	NP-WCMWL	Insert (Class M tolerance)	B036
MWS	MWS type drill	L014-L032	NP-WFC42ZFER2	Wiper insert (For BF407 type cutter)	J042,K026
N			NP-WNGA	Insert (Class G tolerance)	B025
NNMU200608ZEN-OK	Insert (For AHX type cutter)	J022,K023	NP-WNGA	Insert (Class G tolerance)	B025
N	DG holder pack number	F106,F110	NP-WNGA	Insert (Class G tolerance)	B025
NP-CCGB	Insert (Class G tolerance)	B028	NP-WNGA	Insert (Class G tolerance)	B025
NP-CCGW	Insert (Class G tolerance)	B028	NP-WNGA	Insert (Class G tolerance)	B025
NP-CCGW	Insert (Class G tolerance)	B028	NS	Clamp screw	N006
NP-CCGW	Insert (Class G tolerance)	B029	NS	Clamp screw	N006
NP-CCGW	Insert (Class G tolerance)	B029	NSE300	NSE300 type face milling cutter	K032
NP-CCGW	Insert (Class G tolerance)	B029	NSE300R	NSE300 type end mill	K033
NP-CCMH	Insert (Class M tolerance)	B046	NSE400	NSE400 type face milling cutter	K032
NP-CCMW	Insert (Class M tolerance)	B046	NSE400R	NSE400 type end mill	K033
NP-CNGA	Insert (Class G tolerance)	B018	O		
NP-CNGA	Insert (Class G tolerance)	B018	OCTACUT	OCTACUT type face milling cutter	K082
NP-CNGA	Insert (Class G tolerance)	B019	OCTACUT	OCTACUT type end mill	K083
NP-CNGA	Insert (Class G tolerance)	B018	OCTACUT0322SARB	OCTACUT type end mill	K083
NP-CNGA	Insert (Class G tolerance)	B019	OEEEX1705ETR1	Insert (For OCTACUT type cutter)	J022,K083
NP-CNMM	Insert (Class M tolerance)	B042	OEMX	Insert (For OCTACUT type cutter)	J022,J040
NP-CPGB	Insert (Class G tolerance)	B030			K083
NP-CPMH	Insert (Class M tolerance)	B047	OEMX	Insert (For OCTACUT type cutter)	J022,K083
NP-DCGW	Insert (Class G tolerance)	B031	P		
NP-DCGW	Insert (Class G tolerance)	B032	P	DG holder pack number	F108
NP-DCMT	Insert (Class M tolerance)	B046	P	Pin	E036-E039
NP-DNGA	Insert (Class G tolerance)	B020	P	Lock pin	N013
NP-DNGA	Insert (Class G tolerance)	B020	P	Lock pin	N013
NP-DNGA	Insert (Class G tolerance)	B021	P	Lock pin	N013
NP-DNMM	Insert (Class M tolerance)	B042	P	Lock pin	N013
NP-SNGA	Insert (Class G tolerance)	B022	P	Lock pin	N013
NP-SNGA	Insert (Class G tolerance)	B022	PCBNR/L	LL holder	C009
NP-SNMM	Insert (Class M tolerance)	B043	PCLNR/L	LL holder	C008
NP-TCGW	Insert (Class G tolerance)	B033	PDHNR/L	LL holder	C011
NP-TCGW	Insert (Class G tolerance)	B033	PDJNR/L	LL holder	C010
NP-TNGA	Insert (Class G tolerance)	B023	PDJNR/L	LL holder	C010
NP-TNGA	Insert (Class G tolerance)	B023	PMC	PMC type end mill	K120
NP-TNMM	Insert (Class M tolerance)	B043	PMF	PMF type end mill	K116
NP-TPGB	Insert (Class G tolerance)	B034	PMFA	Cartridge (For PMF type end mill)	K116
NP-TPGX	Insert (Class G tolerance)	B034	PMR	PMR type end mill	K118

INDEX FOR TOOL NUMBER

Order Number	PRODUCT NAME	Page	Order Number	PRODUCT NAME	Page
PMR○○○○○○A2○R	PMR type end mill	K118	RN-S○○	Clamp screw	N006
PRDCN○○○○○○○	LL holder	C026	RPMM120400G	Insert (Class M tolerance)	J024
PRGCR/L○○○○○○○	LL holder	C026	RPMT○○○○M0E-JS	Insert (For BRP type cutter)	J025,K087
PS○○	Shim	N009	RPMW○○○○M0○	Insert (For BRP type cutter)	J025,K087
PSBNR/L○○○○○○○	LL holder	C012	RRKY4	Fixed wrench	C037
PSDNN○○○○○○○	LL holder	C013	RRSDR/L○○○○○12	RRSD type holder	C037
PSKNR/L○○○○○○○	LL holder	C015	RRSNR/L○○○○○12	RRSN type holder	C037
PSSNR/L○○○○○○○	LL holder	C014	RRSDS1	Locator (For RRSD type holder)	C037
PSTNR/L○○○○○○○	LL holder	C013	RRSNS1	Locator (For RRSN type holder)	C037
PT○○	Shim	N009	RTG○○A	Insert (For TL type holder)	A121,B037,C038
PT○○○R	Shim	N010	RS○○○OT	Clamp screw	N006
PTFNR/L○○○○○○○	LL holder	C018	S		
PTGNR/L○○○○○○○	LL holder	C016	S○	Clamp screw	N006
PV○○○	Shim	N011	S○○○OR/L	DG holder pack number	F112,F114
PVJNR/L○○○○○16	MP holder	C019	S○○○SCLCR/L○○	S type boring bar (Steel shank)	E031
PVPNR/L○○○○○16	MP holder	C021	S○○○SCZCR/L○○	S type boring bar (Steel shank)	E035
PVVNN○○○○○16	MP holder	C020	S○○○SDQCR/L○○	S type boring bar (Steel shank)	E032
PWLNR/L○○○○○06	LL holder	C022	S○○○SDUCR/L○○	S type boring bar (Steel shank)	E030
PWLNR/L○○○○○06-T	LL holder	C022	S○○○SSKCR/L○○	S type boring bar (Steel shank)	E034
Q			S○○○STFCR/L○○	S type boring bar (Steel shank)	E029
Q○○○R/L	DG holder pack number	F110	S○○○STFER/L○○	AL type boring bar (Steel shank)	E041
QOGT○○○R-G1	Insert (For AQX type cutter)	J022,K065	S○○○SVQCR/L○○	S type boring bar (Steel shank)	E033
QOMT○○○R-M2	Insert (For AQX type cutter)	J022,K065	S○○○SVUCR/L○○	S type boring bar (Steel shank)	E034
R			SBAHR○○○○	Boring holder	D030
R○○○R/L	DG holder pack number	F112,F114	SBAT○○○○○L	Insert (For SBAHR type holder)	D030
RBH○○○○N	Round type holder (For MICRO-DEX/MICRO-MINI type boring bar) ... E019,E024,F128,G032		SBAT○○○○○L-B	Insert (For SBAHR type holder)	D030
RCGT○○○○M0-AZ	Insert (Class G tolerance)	A104	SBH○○○○R	Square type holder (For MICRO-DEX/MICRO-MINI type boring bar) ... E025,F129,G033	
RCMT○○○○M0	Insert (Class M tolerance)	A104	SCACR/L○○○○○○○-SM	Small tools holder (External front turning) ...	D008
RCMX○○○○M0	Insert (Class M tolerance)	A104	SCLCR/L○○○○○○○	SP holder	C024
RCMX○○○○M0-RR	Insert (Class M tolerance)	A104	SCLCR/L○○○○○○○-SM	Small tools holder (External front turning) ...	D008
RCMX○○○○M0-RBS	Insert (Class M tolerance)	A104	SC○○M○○S10-BT○○	BT shank arbor	K123
RDGH120400-M4	Insert (For RRSD type holder)	A105,C037	SC○○M○○S○○-HSK63	HSK63 arbor	K123
RDGJ190600-M5	Insert (Class G tolerance)	C037	SC○○M○○S○○S/L	Straight arbor	K122
RDHX○○○○M0○	Insert (Class H tolerance)	J023	SC○○M○○S○○S/LW	Straight arbor (Carbide shank)	K122
RDMX○○○○M0○	Insert (Class M tolerance)	J023	SCMT○○○○○○○	Insert (Class M tolerance)	A106
RDZX○○○○M0○	Insert (Class M tolerance)	J023	SCMT○○○○○○○-FV	Insert (Class M tolerance)	A106
REMT2004M0	Insert (For BRE type cutter)	J024	SCMW○○○○○○○	Insert (Class M tolerance)	A106
REMW2004M0	Insert (For BRE type cutter)	J024	SD○○	Set bolt	N006
REMX○○○○○N	Insert (For OCTACUT type cutter)	J024	SDEN1203AEN	Insert (For corner angle 45° type cutter) ...	J025
REMX○○○○○N-JS	Insert (For OCTACUT type cutter)	J024	SDJCR/L○○○○○○○	SP holder	C025
RGEN2004M0SN	Insert (For SG20 type cutter)	J024,K027	SDJCR/L○○○○○○○-SM	Small tools holder (External front turning) ...	D009
RNGJ190600-M5	Insert (For RRSN type holder)	A073,A105	SDJER/L○○○○○15	AL holder	C034
RNGN○○○○○○○	Insert (Class G tolerance)	B026	SDNCN○○○○○○○	SP holder	C025
RNMG○○○○○○○	Insert (Class M tolerance)	A073	SDNCR/L○○○○○○○-SM	Small tools holder (External front turning) ...	D009
RN-S○	Clamp screw	N006	SDNEN○○○○○15	AL holder	C034
			SE415-○○○○○○OR	SE415 type face milling cutter	K018

Order Number	PRODUCT NAME	Page	Order Number	PRODUCT NAME	Page
SE515-○○○○○○R	SE515 type face milling cutter	K020	SNMG○○○○○○	Insert (Class M tolerance)	A075
SE545-○○○○○○R	SE545 type face milling cutter	K016	SNMG○○○○○○-FH	Insert (Class M tolerance)	A074
SECN○○○○AFON1	Insert (For SE445•545/LSE445 type cutter)	J025, J026, K015	SNMG○○○○○○-FS	Insert (Class M tolerance)	A074
SECN1203AFFR1	Insert (For SE445 type cutter)	J040, K015	SNMG○○○○○○-FY	Insert (Class M tolerance)	A074
SECN○○○○EFOR/L1	Insert (For SE415•515/QSE415 type cutter)	J026, J027, J040, K017, K019, K021	SNMG○○○○○○-GH	Insert (Class M tolerance)	A076
SEE2L	Carbide end mill	I221	SNMG○○○○○○-HAS	Insert (Class M tolerance)	A077
SEE2S	Carbide end mill	I220	SNMG○○○○○○-HDS	Insert (Class M tolerance)	A078
SEE4L	Carbide end mill	I222	SNMG○○○○○○-MA	Insert (Class M tolerance)	A075
SEEN○○○○AFON	Insert (For SE445•545 type cutter)	J025, J026, K015, K017	SNMG○○○○○○-MH	Insert (Class M tolerance)	A075
SEEN○○○○EFOR/L	Insert (For SE415•515/QSE415 type cutter)	J026, J027, K019, K021	SNMG○○○○○○-MP	Insert (Class M tolerance)	A075
SEER○○○○AFEN-JS	Insert (For SE445•545/LSE445 type cutter)	J025, J026, K015, K017	SNMG○○○○○○-MS	Insert (Class M tolerance)	A076
SEER1203EFER-JS	Insert (For SE•QSE415 type cutter)	J026, K019	SNMG○○○○○○-MV	Insert (Class M tolerance)	A075
SEET13T3AGEN-JL	Insert (For ASX445 type cutter)	J027, K010	SNMG○○○○○○R/L-1G	Insert (Class M tolerance)	A075
SEEW1204AFTN	Insert (For corner angle 45° type cutter)	J027	SNMG○○○○○○-SA	Insert (Class M tolerance)	A074
SEG2SA	Carbide end mill	I218	SNMG○○○○○○-SH	Insert (Class M tolerance)	A074
SEG4SA	Carbide end mill	I219	SNMG○○○○○○-SY	Insert (Class M tolerance)	A074
SEGT13T3AGFN-JP	Insert (For ASX445 type cutter)	J027, K010	SNMM○○○○○○-HBS	Insert (Class M tolerance)	A077
SEMT13T3AGSN-FT	Insert (For ASX445 type cutter)	J027, K010	SNMM○○○○○○-HCS	Insert (Class M tolerance)	A077
SEMT13T3AGSN-JH	Insert (For ASX445 type cutter)	J028, K010	SNMM○○○○○○-HDS	Insert (Class M tolerance)	A078
SEMT13T3AGSN-JM	Insert (For ASX445 type cutter)	J028, K010	SNMM○○○○○○-HL	Insert (Class M tolerance)	A076
SEM1204AZTN	Insert (For corner angle 45° type cutter)	J027	SNMM○○○○○○-HM	Insert (Class M tolerance)	A077
SET○○○R3XM	Insert (For SET holder)	G023	SNMM○○○○○○-HV	Insert (Class M tolerance)	A077
SET○○○R3XM	Insert (For SET holder)	G023	SNMM○○○○○○-HX	Insert (Class M tolerance)	A077
SETHR○○○○○○	SET holder	G022	SNMM○○○○○○-HXD	Insert (Class M tolerance)	A078
SETK○○	Clamp bridge	N014	SNMM○○○○○○-HZ	Insert (Class M tolerance)	A077
SETS○○	Clamp screw	N006	SNMN○○○○○○	Insert (Class M tolerance)	A092, J028
SFAN○○○○ZFFR/L2	Insert (For BF407 type cutter)	J028, K026	SNT○○○R22MM	Insert (For SNT holder)	G025
SFCN○○○○ZFFR/L2	Insert (For BF•QBF407 type cutter)	J028, J040, K026	SNT○○○R3XM	Insert (For SNT holder)	G025
SG20-○○○○○○R	SG20 type face milling cutter	K027	SNT○○○R3XM	Insert (For SNT holder)	G025
SH○○○-FSDUCL	SH holder	D026	SNT○○○R22MP	Insert (For SNT holder)	G025
SL32○○-90	Boring bar sleeve	H030	SNTF○○○○R	SNT holder	G024
SLCS○○○	Clamp screw	N006	SOET12T308PEER-JL	Insert (For ASX400 type cutter)	J028, K030
SLG○○○○L	Insert (For STLG type end mill)	J028, K113	SOGT12T308PEFR-JP	Insert (For ASX400 type cutter)	J029, K030
SL-ONEN120404ASN	Insert (For AOX445 type cutter)	J040, K024	SOMT12T3○○PEER/L-○○	Insert (For ASX400 type cutter)	J029, K030
SMGHR○○○○○○16	SMG holder	F124, G028	SPCA53Z	Insert (For FF3000 type cutter)	J029
SMGTR○○○○○○○○	Insert (For SMG holder)	F124, G029	SPCG53Z	Insert (For FF3000 type cutter)	J029
SMTTR○○○○○○○○	Insert (For SMT holder)	F124, G029	SPEN○○○○EDR/L	Insert (For corner angle 15° type cutter)	J030
SNGA○○○○○○	Insert (Class G tolerance)	A078, B043	SPEN○○○○EEER/L1	Insert (For FBP415/QBP415 type cutter)	J030, K025
SNGG○○○○○○-PK	Insert (Class G tolerance)	A074	SPEN1203EETR1	Insert (For FBP415/QBP415 type cutter)	J040
SNGG○○○○○○R/L	Insert (Class G tolerance)	A076	SPEN○○○A	Insert (For FP490•590•690 type cutter)	J030
SNGN○○○○○○	Insert (Class G tolerance)	A092, B027, B045	SPER1203EEER-JS	Insert (For FBP415/QBP415 type cutter)	J030, K025
SNMA○○○○○○	Insert (Class M tolerance)	A078	SPGN○○○○○○	Insert (Class G tolerance)	A123, B037, B052, J030
SNMF43B2G	Insert (For BN425/DN type cutter)	J028	SPGX○○○○○○	Insert (Class G tolerance)	A107, B048
			SPMB1204APT	Insert (For BSP type end mill)	J031, K078
			SPMN○○○○○○	Insert (Class M tolerance)	A122, J030
			SPMN○○○○○○T	Insert (Class M tolerance)	A122, J030



INDEX FOR TOOL NUMBER

Order Number	PRODUCT NAME	Page	Order Number	PRODUCT NAME	Page
VAPDSCB	VIOLET end mill	L182	VCMD	MIRACLE end mill	I159
VAPDSSUS	VIOLET end mill	L165-L170	VCMDL	MIRACLE end mill	I161
VASFPR	VIOLET end mill	I228	VCMDSC	MIRACLE end mill	I160
VBET○○○○○○R/L-SN	Insert (Class E tolerance)	A113	VCMH	MIRACLE end mill	I165
VBET○○○○○○R/L-SR	Insert (Class E tolerance)	A112	VCMHDRB	MIRACLE end mill	I163,I164
VBET○○○○○○R/LW-SN	Insert (Class E tolerance)	A113	VCGT○○○○○○-AZ	Insert (Class G tolerance)	A114
VBGT○○○○○○R/L-F	Insert (Class G tolerance)	A112	VCGT○○○○○○R/L-F	Insert (Class G tolerance)	A114
VBMT○○○○○○	Insert (Class M tolerance)	A112	VCMT○○○○○○	Insert (Class M tolerance)	A114
VBMT○○○○○○-FV	Insert (Class M tolerance)	A112	VCMT○○○○○○-FV	Insert (Class M tolerance)	A114
VBMT○○○○○○-MV	Insert (Class M tolerance)	A112	VCMT○○○○○○-MV	Insert (Class M tolerance)	A114
VBMT○○○○○○-SV	Insert (Class M tolerance)	A112	VCMT○○○○○○-SV	Insert (Class M tolerance)	A114
VC2C	MIRACLE end mill	I173	VCMT○○○○○○-FV	Insert (Class M tolerance)	A114
VC2ESB	MIRACLE end mill	I131	VCMT○○○○○○-MV	Insert (Class M tolerance)	A114
VC2JRB	MIRACLE end mill	I156	VCMT○○○○○○-SV	Insert (Class M tolerance)	A114
VC2JS	MIRACLE end mill	I126	VCMW○○○○○○	Insert (Class M tolerance)	A114
VC2LB	MIRACLE end mill	I139	VCPSRB	MIRACLE end mill	I149-I153
VC2LZB	MIRACLE end mill	I140	VCRC	MIRACLE end mill	I174
VC2MB	MIRACLE end mill	I136	VCSFPR	MIRACLE end mill	I167
VC2MBOH	MIRACLE end mill	I137	VCXB	MIRACLE end mill	I143,I144
VC2MBSS	MIRACLE end mill	I137	VDGX○○○○○○R/L	Insert (Class G tolerance)	A115
VC2MDB	MIRACLE end mill	I138	VDGX○○○○○○R/L-F	Insert (Class G tolerance)	B050
VC2MS	MIRACLE end mill	I123,I124	VEUSM	VIOLET drill	L178,L179
VC2MSSS	MIRACLE end mill	I125	VF2MV	IMPACT MIRACLE end mill	I083
VC2MT	MIRACLE end mill	I168	VF2SB	IMPACT MIRACLE end mill	I099
VC2PSB	MIRACLE end mill	I134	VF2SDB	IMPACT MIRACLE end mill	I100
VC2PSBP	MIRACLE end mill	I135	VF2SDBL	IMPACT MIRACLE end mill	I101
VC2SB	MIRACLE end mill	I133	VF2SSB	IMPACT MIRACLE end mill	I098
VC2SS	MIRACLE end mill	I122	VF2WB	IMPACT MIRACLE end mill	I097
VC2SSB	MIRACLE end mill	I132	VF2XL	IMPACT MIRACLE end mill	I082
VC2XL	MIRACLE end mill	I127	VF2XLB	IMPACT MIRACLE end mill	I103-I107
VC2XLB	MIRACLE end mill	I141	VF2XLBS	IMPACT MIRACLE end mill	I102
VC2XLB6	MIRACLE end mill	I142	VF3XB	IMPACT MIRACLE end mill	I108,I109
VC2XZB	MIRACLE end mill	I145	VF4MB	IMPACT MIRACLE end mill	I110
VC3LB	MIRACLE end mill	I146	VF4MV	IMPACT MIRACLE end mill	I084
VC3MB	MIRACLE end mill	I146	VF4SVB	IMPACT MIRACLE end mill	I111
VC4JC	MIRACLE end mill	I130	VF6MHV	IMPACT MIRACLE end mill	I088
VC4JRB	MIRACLE end mill	I158	VF6MHVCH	IMPACT MIRACLE end mill	I089
VC4MB	MIRACLE end mill	I147	VF6MHVRB	IMPACT MIRACLE end mill	I116
VC4MC	MIRACLE end mill	I128	VF6MHVRBCH	IMPACT MIRACLE end mill	I117
VC4MCSS	MIRACLE end mill	I129	VF6SVRCH	IMPACT MIRACLE end mill	I095
VC4MT	MIRACLE end mill	I169,I170	VF8MHVCH	IMPACT MIRACLE end mill	I090
VC4SRB	MIRACLE end mill	I157	VF8MHVRBCH	IMPACT MIRACLE end mill	I118
VC4STB	MIRACLE end mill	I171,I172	VFHV RB	IMPACT MIRACLE end mill	I112,I113
VC6MB	MIRACLE end mill	I148	VFJHV	IMPACT MIRACLE end mill	I087
VC6MH	MIRACLE end mill	I166	VFMD	IMPACT MIRACLE end mill	I092
VC8MH	MIRACLE end mill	I166	VFMDRB	IMPACT MIRACLE end mill	I120
VCHFRB	MIRACLE end mill	I154,I155	VFMFPR	IMPACT MIRACLE end mill	I096
VCHSM	VCHSM type drill	L117	VFMHV	IMPACT MIRACLE end mill	I085
VCLD	MIRACLE end mill	I162	VFMHVCH	IMPACT MIRACLE end mill	I086
			VFMHVRB	IMPACT MIRACLE end mill	I114
			VFMHVRBCH	IMPACT MIRACLE end mill	I115
			VFSD	IMPACT MIRACLE end mill	I091

Order Number	PRODUCT NAME	Page	Order Number	PRODUCT NAME	Page
VFSDRB	IMPACT MIRACLE end mill	I119	WNMG	Insert (Class M tolerance)	A088
VFSFPR	IMPACT MIRACLE end mill	I093	WNMG	Insert (Class M tolerance)	A090
VFSFPRCH	IMPACT MIRACLE end mill	I094	WNMG	Insert (Class M tolerance)	A090
VNGA	Insert (Class G tolerance)	A087,B044	WNMG	Insert (Class M tolerance)	A089
VNGG	Insert (Class G tolerance)	A085	WNMG	Insert (Class M tolerance)	A089
VNGG	Insert (Class G tolerance)	A086	WNMG	Insert (Class M tolerance)	A089
VNGG	Insert (Class G tolerance)	A085	WNMG	Insert (Class M tolerance)	A089
VNGM	Insert (Class G tolerance)	A085	WNMG	Insert (Class M tolerance)	A090
VNMG	Insert (Class M tolerance)	A086	WNMG	Insert (Class M tolerance)	A089
VNMG	Insert (Class M tolerance)	A085	WNMG	Insert (Class M tolerance)	A090
VNMG	Insert (Class M tolerance)	A085	WNMG	Insert (Class M tolerance)	A088
VNMG	Insert (Class M tolerance)	A086	WNMG	Insert (Class M tolerance)	A088
VNMG	Insert (Class M tolerance)	A086	WNMG	Insert (Class M tolerance)	A088
VNMG	Insert (Class M tolerance)	A085	WNMG	Insert (Class M tolerance)	A089
VNMG	Insert (Class M tolerance)	A081	WOWE12T308PE	Wiper insert (For ASX400 type cutter)	J039
VNMG	Insert (Class M tolerance)	A086			K030
VNMG	Insert (Class M tolerance)	A086	WPC42EE	Wiper insert (For FBP415/QBP415 type cutter)	J039,K025
VNMG	Insert (Class M tolerance)	A085			
VPET	Insert (Class E tolerance)	A116	WPGT	Insert (Class G tolerance)	A119,B051
VPGT	Insert (Class G tolerance)	A116	WPGT	Insert (Class G tolerance)	A119
VSD	VIOLET drill, Straight shank	L180,L181	WPMT	Insert (Class M tolerance)	A119
W			WPSTN	Shim	N011
WBG	Insert (Class G tolerance)	A117	WPSWC43	Shim	N011
WBM	Insert (Class M tolerance)	A117	WPSWN43	Shim	N011
WCG	Insert (Class G tolerance)	A118	WPT4405	Plate (For TAW drill)	L122-L127,L131
WCM	Insert (Class M tolerance)	A118	WS	Wedge screw	N008
WCMW	Insert (Class M tolerance)	B051	WS	Clamp screw	N008
WCS	Shim screw	N008	X		
WEC	Wiper insert (For SE445*545/ LSE445 type cutter)	J038,K015	XCMT	Insert (Class M tolerance)	A120
WEC	Wiper insert (For SE445*545/ LSE445 type cutter)	J038,K015,K017	XDGT1550PDER	Insert (For BXD4000 type cutter)	J036
WEC	Wiper insert (For SE415 type cutter)	J038,K019	XDGT	Insert (For BXD4000*7000 type cutter)	J036
WEC	Wiper insert (For SE415*515 type cutter)	J038			K062
		J039,K019,K021	XDGT	Insert (For BXD4000*7000 type cutter)	J037
WEC42W11R/L	Wiper insert (For E404 type cutter)	J042			K062
WEC400PEER/L10C	Wiper insert (For SE400 type cutter)	J038	XDGX2270	Insert (For BXD4000*7000 type cutter)	J037
WEEW13T3AG	Wiper insert (For ASX445 type cutter)	J042			K057
		K010	Z		
WEEW13T3AG	Wiper insert (For ASX445 type cutter)	J039	ZCMX	Insert (For DCCC type end mill)	J037,K094
		K010	ZRM0603R	Insert (For BAP300 type end mill)	J037,K041
WFC42ZFER/L2	Wiper insert (For BF407/QBF407 type cutter)	J042,K026			
WNEU2006ZEN7C-WK	Insert (For AHX640W type cutter)	J039,K023			
WNMA	Insert (Class M tolerance)	A090			
WNMG	Insert (Class M tolerance)	A090			
WNMG	Insert (Class M tolerance)	A088			
WNMG	Insert (Class M tolerance)	A088			

Memo

A series of horizontal dashed lines for writing, spanning the width of the page.